

ARTOME10

Quick user guide



1

- Connect the power cord to the **POWER** connector on the back (image A)



2

- Open the front door by pressing the door in the upper left corner
- Feed the **HDMI-USB** cable through the inlet and connect the cable to the Artome **HDMI 1** and **ARTOME +** connectors (image B)



3

- Connect the **HDMI** end of the cable to your computer. Use adapter if necessary (image C)
- If you're using a camera or speakerphone attached to your Artome, also connect the **USB** end of the cable to your computer (image C)
- Artome starts automatically when the HDMI cable is connected between the computer and the Artome
- If necessary, turn on the Artome from the **POWER** button on the control panel



4

- If you're using a speaker phone, connect its USB-dongle to the **USB** connector on the Artome (image B)
- Be sure to charge the speakerphone and turn it off after use (image D)

Video conferencing software: device settings

Teams, Zoom, Meet etc.

Camera: "The name of the USB camera"

Uses camera connected to Artome as the image source

Speaker: ARTOME HybriDock

Artome speakers play back the video call audio

Speaker: "The name of the speakerphone"

Speakerphone plays back the video call audio

Microphone: "The name of the speakerphone"

Uses speakerphone as the audio source

Microphone: ARTOME HybriDock

Uses Artome **MIC 1** or **MIC 2** connection as the audio source

- when using an external microphone, the mic sound plays back from the Artome speakers in addition to the video call

Control panel



PAUSE

Turns off the image and the sound

- image and sound restores by pressing again

FREEZE

Freezes the image, but not the sound

- activates the image height adjustment

VOL +/-

Adjusts the volume

- adjusts the image height when **FREEZE** is turned on

SOURCE

Selects the source between connected devices

POWER

Turns the device on and off

USB

Connection for a USB camera

Connections



HDMI 1 & 2

Audio and video input

ARTOME+

Connection between video conferencing devices and computer

USB

Connection for additional devices

- e.g. a wireless speakerphone receiver

EPSON® USB

Content playback from USB-memorystick with Epson® PC-free feature

or connection for Miracast® adapter for wireless network projection from mobile device or Windows® computer

AUDIO OUT L & R

Audio output for external speakers

- balanced stereo 0 dBV

HDMI OUT

Audio and video output

MIC 1 & 2

Connection for a wired microphone or a wireless microphone receiver

Adjusting image focus



- Open the front door and adjust the image with the **Focus** lever