

Artome S Series Projector Installation guide



1. Installer toolkit: cable harness, thumb screws, speaker cover screws, PH2 and HEX3 tools, cable ties, and rack screws.

NOTE: Cables may already be installed.



2. Compatible projector models:
Epson (PowerLite) EB-720/EB-725W/EB-735F/
EB-750F/EB-755F/EB-760W/EB-770F/EB-775F

NOTE: Lock the Artome wheels before installation.



3. Install the projector adapter using PH2 tool.

NOTE: Be careful not to overtighten the screws.



4. Remove the back cover with HEX3 tool.



5. Remove the top cover with HEX3 tool.



6. Remove the glass.



7. Mount the projector inside the cabinet.



8. Fix the projector to cabinet with thumb screws.



9. Connect the following cables:

HDMI 1, PROJECTOR AUDIO, RS-232,
PROJECTOR POWER.

NOTE: Connector placement might vary.

Artome S Series

Projector Installation guide



10. Connect the following cables:

HDMI 1, HDMI 2, AUDIO OUT, RS-232,
PROJECTOR POWER.



11. Secure the cable harness with cable ties.



12. Reinstall the glass. Clean it if needed.



13. Reinstall the top cover.



14. Connect HDMI 2 and 3.5 mm audio
cables to the back cover.



15. Reinstall the back cover.



16. Connect the power cable. The cable is
stored inside the device.



17. Press Power and wait 2 minutes for the
automatic setup to complete.

The device will shut down when ready.



18. Installation is ready.



Scan to access Artome Support online

2.0

ARTOME