

ARTOME X20

Quick User Guide



1

- Open the door by pressing the upper left corner (image A)

2

- Feed the **HDMI-USB** cable through the inlet and connect the cable to the Artome **HDMI** and **ARTOME +** connectors (image B)

3

- Connect **HDMI-USB** cable to your computer **HDMI** and **USB A**-ports. Use adapter if necessary. (image C)

4

- Power on the Artome by pressing the **POWER** button on the control panel

Image adjustment



T. Test Pattern

Select the Test Pattern mode and adjust the image with phases 1-4.

1. Lens shift

Adjusts the image position horizontally and vertically

2. Menu / Settings / Geometry Correction / H/V-keystone

V-keystone:

Adjusts the tilt angle of the image
(compare that the vertical edges are straight)

V-balance:

Adjusts the image height
(compare that the circular shapes of the Test Pattern are symmetrical)

3. Zoom

Adjusts the image size

4. Focus

Adjusts the image focus



Artome support
support@artome.fi

Control panel



PAUSE

Turns off the image and the sound
• image and sound restores by pressing again

FREEZE

Freezes the image, but not the sound

VOL +/-

Adjusts the volume

SOURCE

Selects the source between connected devices


POWER

Turns the device on and off

USB

Connection for USB camera

Connections

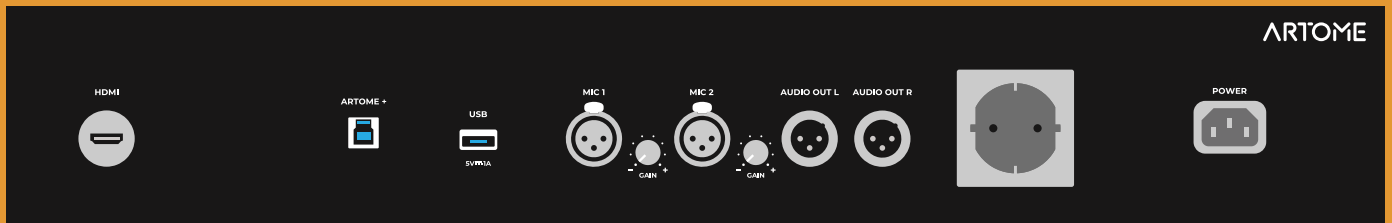

HDMI

Audio and video input

ARTOME+

Interface between video conferencing devices and a computer

USB

Connection for additional devices
e.g. a wireless desktop microphone receiver

MIC 1 & 2

Connection for a wired microphone or a wireless microphone receiver

AUDIO OUT L & R

Audio output for external speakers
• balanced stereo 0 dBV

Power

Connection for the mains power of the device



Artome support
support@artome.fi

5.0



ARTOME