

Artome X12

Projector Installation guide



1. Lock the wheels and open the front door.



2. Lock the angle adjustment to the bottom position.



3. Open the front cover and place the cables on the cover plate.



4. Remove the back cover (HEX3) and disconnect the pass-through cables.




5. Open the top cover panel.




6. Remove the projector cover.

Artome X12


Projector Installation guide

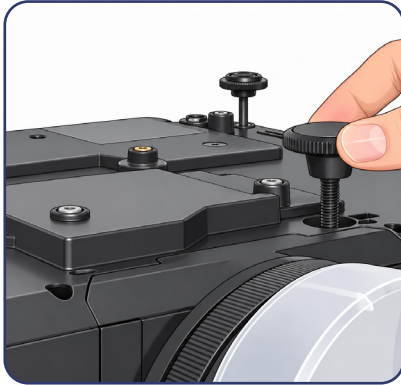


7. Extend the projector's legs well out before installation.

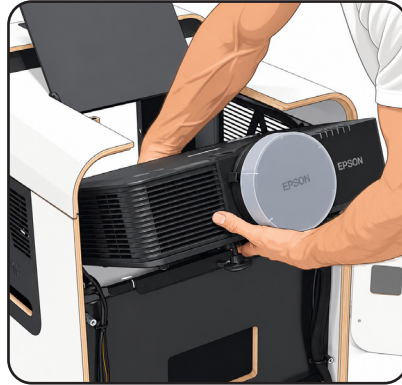

8. Carefully slide in the projector and align the back legs with the alignment holes.

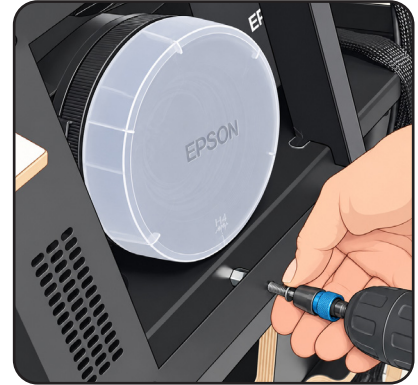

9. Re-install the projector cover.

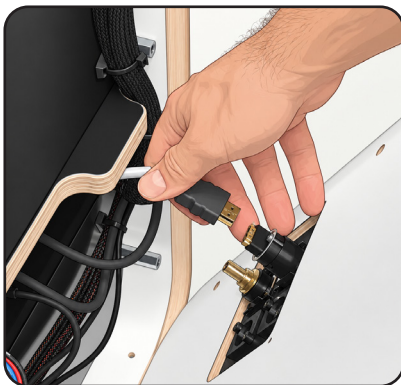

10. Connect the pass-through cables and re-install the back cover.




11. Tighten the legs and secure the projector to the cabinet with the thumb screw.




12. Connect the projector cables to the corresponding connectors and close the front cover.



13. For best auto-keystone performance, rotate the projector's image shift control fully clockwise to the highest position and set the image zoom to maximum.

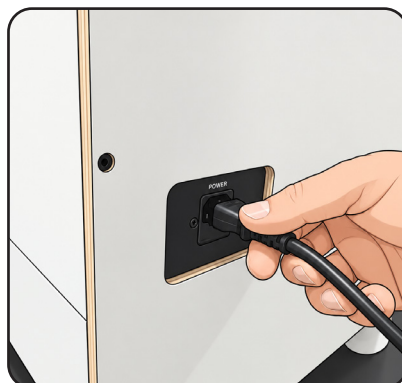

14. Connect the power cable.

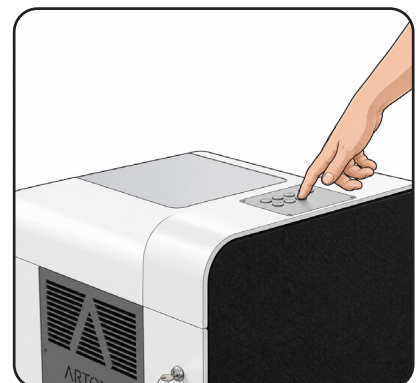

15. Turn the unit on.

NOTE: On first power-up, the unit runs an automatic setup for approximately 2 minutes and shuts down when complete.