

ARTOME M10

Quick user guide

First time use

A. Connect the power cable to the POWER connector on the back.

Open the front door by pressing the door from the upper left corner.

B. Feed the HDMI-USB cable through the cable grommet and connect the cable to the Artome HDMI and ARTOME+ connectors.

C. Connect HDMI-USB cable to your computer HDMI and USB A-ports. Use adapter if necessary.

Artome starts automatically when Artome detects HDMI from computer. If necessary, turn on the Artome from the Power button.

Using Artome in video conferencing


USB connects Artome and computer to external USB devices, which are needed for videoconferencing.

D. When using speakerphone for audio; install wireless USB Dongle of external speakerphone to USB port.

E. Connect the USB cable to the camera. Place the camera on the top panel and connect the cable to the USB port. If necessary, use the magnetic camera stand.

Adjusting image focus

F. Adjust the image focus with the Focus lever.

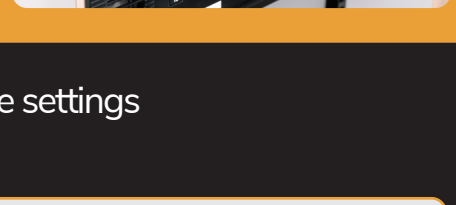

Video conferencing software: device settings

SPEAKER

"The name of the speakerphone"

Speakerphone plays back the video call audio

Artome Hybridock (USB)

Artome speakers play back the video call audio

EPSON PJ (HDMI)

Artome speakers play back the video call audio

MICROPHONE

"The name of the speakerphone"

Uses speakerphone as the audio source

Artome Hybridock

Uses Artome MIC 1 or MIC 2 connection as the audio source

- the mic sound plays back from the Artome speakers in addition to the video call

CAMERA

"The name of the USB camera"

Uses camera connected to Artome as the image source




Artome support
support@artome.fi

5.0





ARTOME

Control panel

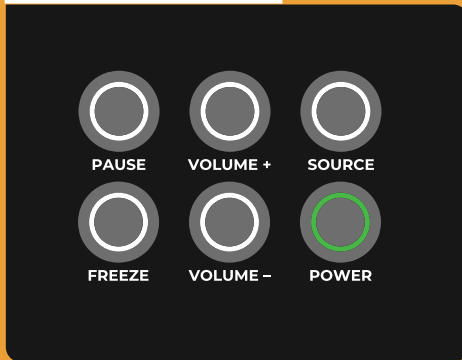


- PAUSE** Turns off the image and the sound
 - Press again to restore the image and the sound
- FREEZE** Freezes the image, but not the sound
 - Long press to activate image zoom adjustment
- VOL +/-** Adjusts the volume
 - Adjusts the image zoom when the adjustment is active
- SOURCE** Selects the source between connected devices
 - Long press to activate audio only mode
 - Press again to return to projection mode
- POWER** Turns the device on and off

Top panel

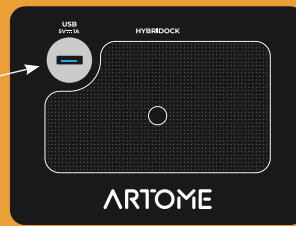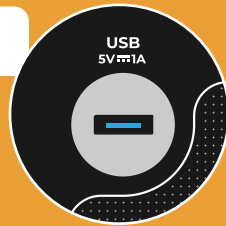


- USB** Connection for additional devices
 - e.g. a USB camera

Connection panel

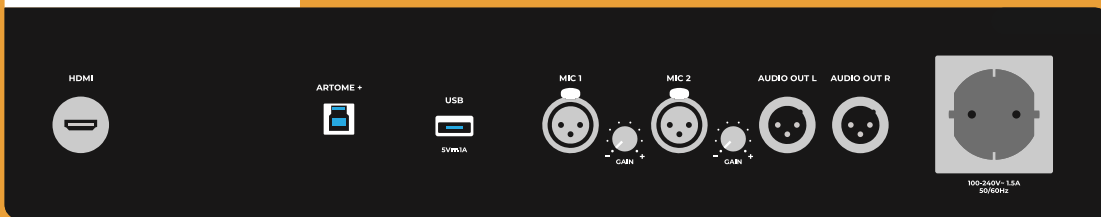


- ARTOME+** Connection between computer and videoconferencing devices
- USB** Connection for additional devices
 - e.g. a wireless speakerphone receiver
- MIC 1 & 2** Connection for a wired microphone or a wireless microphone receiver
- GAIN** Mic gain adjustment
- AUDIO OUT L & R** Audio output for external speakers
 - balanced stereo 0 dBV
- HDMI** Audio and video input

Back panel

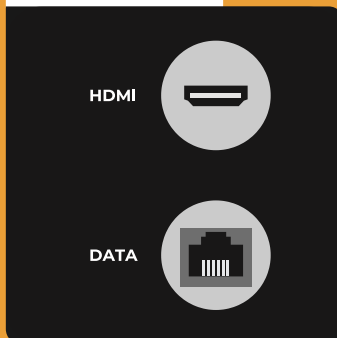

- HDMI** Audio and video input
- DATA** Local network connection

Power connector

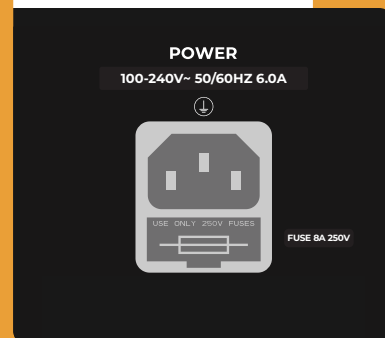

Artome support
support@artome.fi